



TAPEPRO
DRYWALL TOOLS

TAPEPRO
DRYWALL TOOLS



TAPEPRO LOADING PUMP

For further information contact: WALLBOARD TOOL COMPANY PTY LTD: PO BOX 2508 Burleigh MDC QLD 4220 Australia.
 Telephone: 1300 653 177 Facsimile: 1300 657 442 Email: sales@wallboardtools.com.au Website: www.wallboardtools.com.au

TAPEPRO LOADING PUMP

TAPEPRO
DRYWALL TOOLS

The Tapepro Loading Pump and its nozzles are designed to fill the Tapepro Automatic Taping Tools with joint compound. The Tapepro Loading Pump is also compatible with the Premier Drywall Tools range making it even more versatile.

BEFORE USE

- > Ensure that the Tapepro Loading Pump screen is free from any dry joint compound and that it does not have any obvious holes.

USING THE TAPEPRO LOADING PUMP

1. Mix joint compound making sure it is of a smooth consistency with no visible lumps. **(LP-1)**
2. Fit the appropriate nozzle to the Tapepro Loading Pump if required. **(LP-2 & LP-3)**
3. Place the Tapepro Loading Pump into the bucket of compound. **(LP-4)**
4. Prime the pump by removing the two clips on the sides of the pump releasing the pump tube. Ease the pump down and then place some compound into the tube. Re-clip the pump tube to the head of the pump. Priming the Tapepro Loading Pump is only necessary if it struggles to draw up the compound and distribute into the taping tools. **(LP-5)**

CLEANING

Your Tapepro Loading Pump should be cleaned after every use to maximise lifespan and maintain optimal performance.

1. Empty any excess joint compound from the pump into a bucket.
2. Un-clip the pump tube from the head of the pump. **(LP-6)**
3. Wash the pump tube out thoroughly using a hose paying special attention to the wiper cup and the screen in the bottom of the tube. **(LP-7)**
4. Return the pump tube to the head and re-fasten the clips.



MAINTENANCE

All replacement parts are available from your local plasterboard distributor or Wallboard Tool Company. For your nearest distributor please call Wallboard Tool Company on 1300 653 177 or visit our website at www.wallboardtools.com.au

General Maintenance

- > To maintain smooth unrestricted movement, once a week lightly spray the outside of the pump with a silicone spray trying not to get any of this spray inside the pump tube as this may cause problems when trying to draw the compound up. Avoid spraying the rubber seals as this may reduce their lifespan due to perishing.
- > Regular wear parts should be replaced as needed.

Filter Screen

When the screen in the bottom of the pump tube becomes clogged with dry compound or develops holes it will need to be replaced by performing the following simple steps:

1. Un-clip the pump tube from the pump head separating the pump into two sections.
2. Unscrew the wing nut located at the bottom of the pump tube.
3. Remove the old filter screen. **(LP-8)**
4. Clean the surrounding area of all dry joint compound.
5. Fit the new filter screen.
6. Replace the wing nut.

Tip: Maintaining and replacing wear parts is made easy with the Tapepro Loading Pump Maintenance Kit. LP-9

WARRANTY

All manufacturing faults are covered under the warranty. All non wear parts are covered under a 3 year warranty.

